

POLAROID

**LAND FILM TYPE 20C FOR
THE SWINGER**

8 PRINTS 2½ x 3¼ IN.

POLAROID

LAND FILM TYPE 20C FOR

THE SWINGER

POLAROID

LAND FILM TYPE 20C FOR

THE SWINGER

USE BEFORE

8 PRINTS 2½ x 3¼ IN.

POLAROID

**LAND FILM TYPE 20C FOR
THE SWINGER**

8 PRINTS 2½ x 3¼ IN.

Type 20C black and white roll film is for use only with the Polaroid Swinger Model 20, Swinger II, and Swinger Sentinel Land cameras. Do not use this film with the Big Swinger, Model 3000, Zip, Super Swinger, Colour Swinger, Colour Swinger II, Super Colour Swinger, and Super Colour Swinger II Land cameras.

See film instruction sheet inside.

Eight black and white prints $2\frac{1}{2} \times 3\frac{1}{4}$ in.
(approximately 6 x 8 cm.).

STORE IN A COOL PLACE.

A product of Polaroid Corporation,
Cambridge, Massachusetts 02139, U.S.A.

"Polaroid" and "Swinger" are registered trademarks of Polaroid Corporation, Cambridge, Mass., U.S.A.

Polaroid® Swinger® Marcas Registradas
Made in the U.S.A.

CAUTION: This process uses a caustic jelly which is safely packed in sealed containers inside the large film roll. If accidentally you should get some of this jelly on your skin, wipe it off immediately. To avoid an alkali burn, wash the area with plenty of water as soon as possible. It is particularly important to keep the jelly away from eyes and mouth. Keep discarded materials out of reach of children and animals, and out of contact with clothing and furniture, as discarded materials still contain some jelly.

FULL WARRANTY: Polaroid will replace any film that is defective in manufacture, labeling or packaging, provided representative samples are returned to your dealer or to Customer Service. This warranty excludes all consequential damages and does not apply to outdated film.